



# StandbyU Shield Pendant

## Quick Testing Guide -TeamFirst Plan

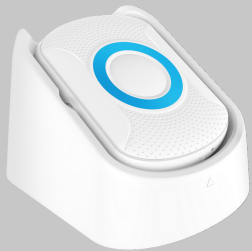

### Prepare to Test

- Charge the device in the charging cradle.
- Let your Responders know you're testing.
- Remind them not to escalate the call during the test.

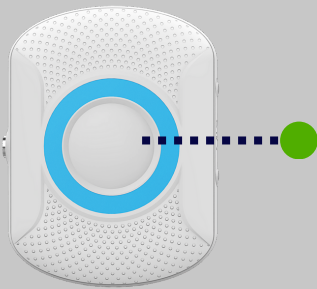

### Activate the SOS Alarm

- Press the SOS button 3 times quickly & firmly.
- The device will vibrate 5 times.
- Speak clearly for 30 - 60 seconds.



### Check back with Your Responders



- Did they receive the location text, and hear the audio clearly?
- Any issues during testing? Let your Responders know you'll test again in 10 minutes.
- If the second test isn't successful, contact the StandbyU Shield Team on 1800 069 010.