


# StandbyU Shield

## Quick Function Guide - Shield Pendant



### Check device is turned on.

- Press the silver button once.
- The blue LED light will flash.

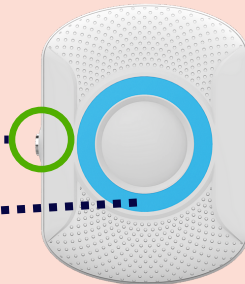


### Charge and turn on.

- Place device in the charging cradle.
- It will turn on automatically and vibrate.

### Activate SOS Alert

- Press the SOS button 3 times quickly & firmly.
- The device will vibrate 5 times.

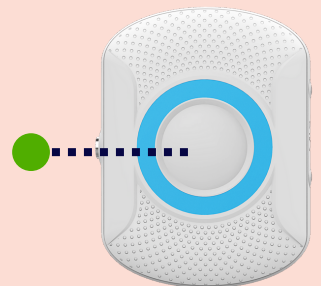


### Turn device off

- Press the silver button 10 times quickly.
- The device will vibrate and the blue light will circle.

### Turn device on

- Press the silver button for 3 seconds.
- The device will vibrate and the blue light will circle.

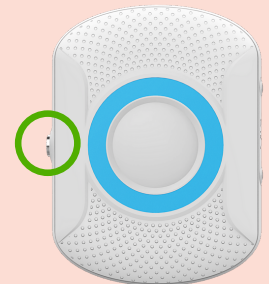

### Contact the Shield Team

- 1800 069 010
- [yourshield@standbyu.org.au](mailto:yourshield@standbyu.org.au)